

Universal Timer Remote Shutter Release Compatibility

Cable	Compatible Camera Models
<p data-bbox="108 342 148 376">C1</p> 	<p data-bbox="534 342 721 376">Canon EOS: 1200D, 1100D, 1000D, 750D, 700D, 650D, 600D, 550D, 500D, 450D, 400D, 350D, 100D, 60D, 70D, 80D.</p> <p data-bbox="534 510 662 544">Pentax: K200, K110D Super, K1100D, K100D, K20D, K10D, K-7, K-5, Kr, Kx, *istDS2, *istD, -ist, MZ-6, MZ-L</p>
<p data-bbox="108 710 148 743">C3</p> 	<p data-bbox="534 710 721 743">Canon EOS: 1DX Mark II, 1D X, 1D C, 1D Mark IV, 1Ds Mark III, 1D Mark III, 1Ds Mark II, 1D Mark II, 1D Mark II N, 1Ds, 1D, 5D Mark IV, 5D Mark III, 5D Mark II, 5D, 5D S, 5D SR, 7D, 7D Mark II, 50D, 40D, 30D, 20D, 10D, 1V, EOS3, D2000</p>
<p data-bbox="108 1077 148 1111">N1</p> 	<p data-bbox="534 1077 646 1111">Nikon: D4s, D3S, D3X, D3, D2, D2Xs, D2X, D2Hs, D2H, D1H, D1, D810, D800E, D800, D700, D300s, D300, D200, F100, N90s, F90X, F5, F6, F90</p> <p data-bbox="534 1290 598 1323">Fuji: S5 Pro, S3 Pro</p>
<p data-bbox="108 1444 148 1478">N3</p> 	<p data-bbox="534 1444 646 1478">Nikon: D7100, D7000, D5300, D5200, D5100, D5000, D3300, D3200, D3100, D3000, D610, D600, D90</p>